

ORANIER


Kurzanleitung / Quick start Guide / Guide rapide

Heizen mit Holz / Heating with wood / Chauffer au bois

1.

Brennstoffwähler


Fuel selector / Sélection du combustible

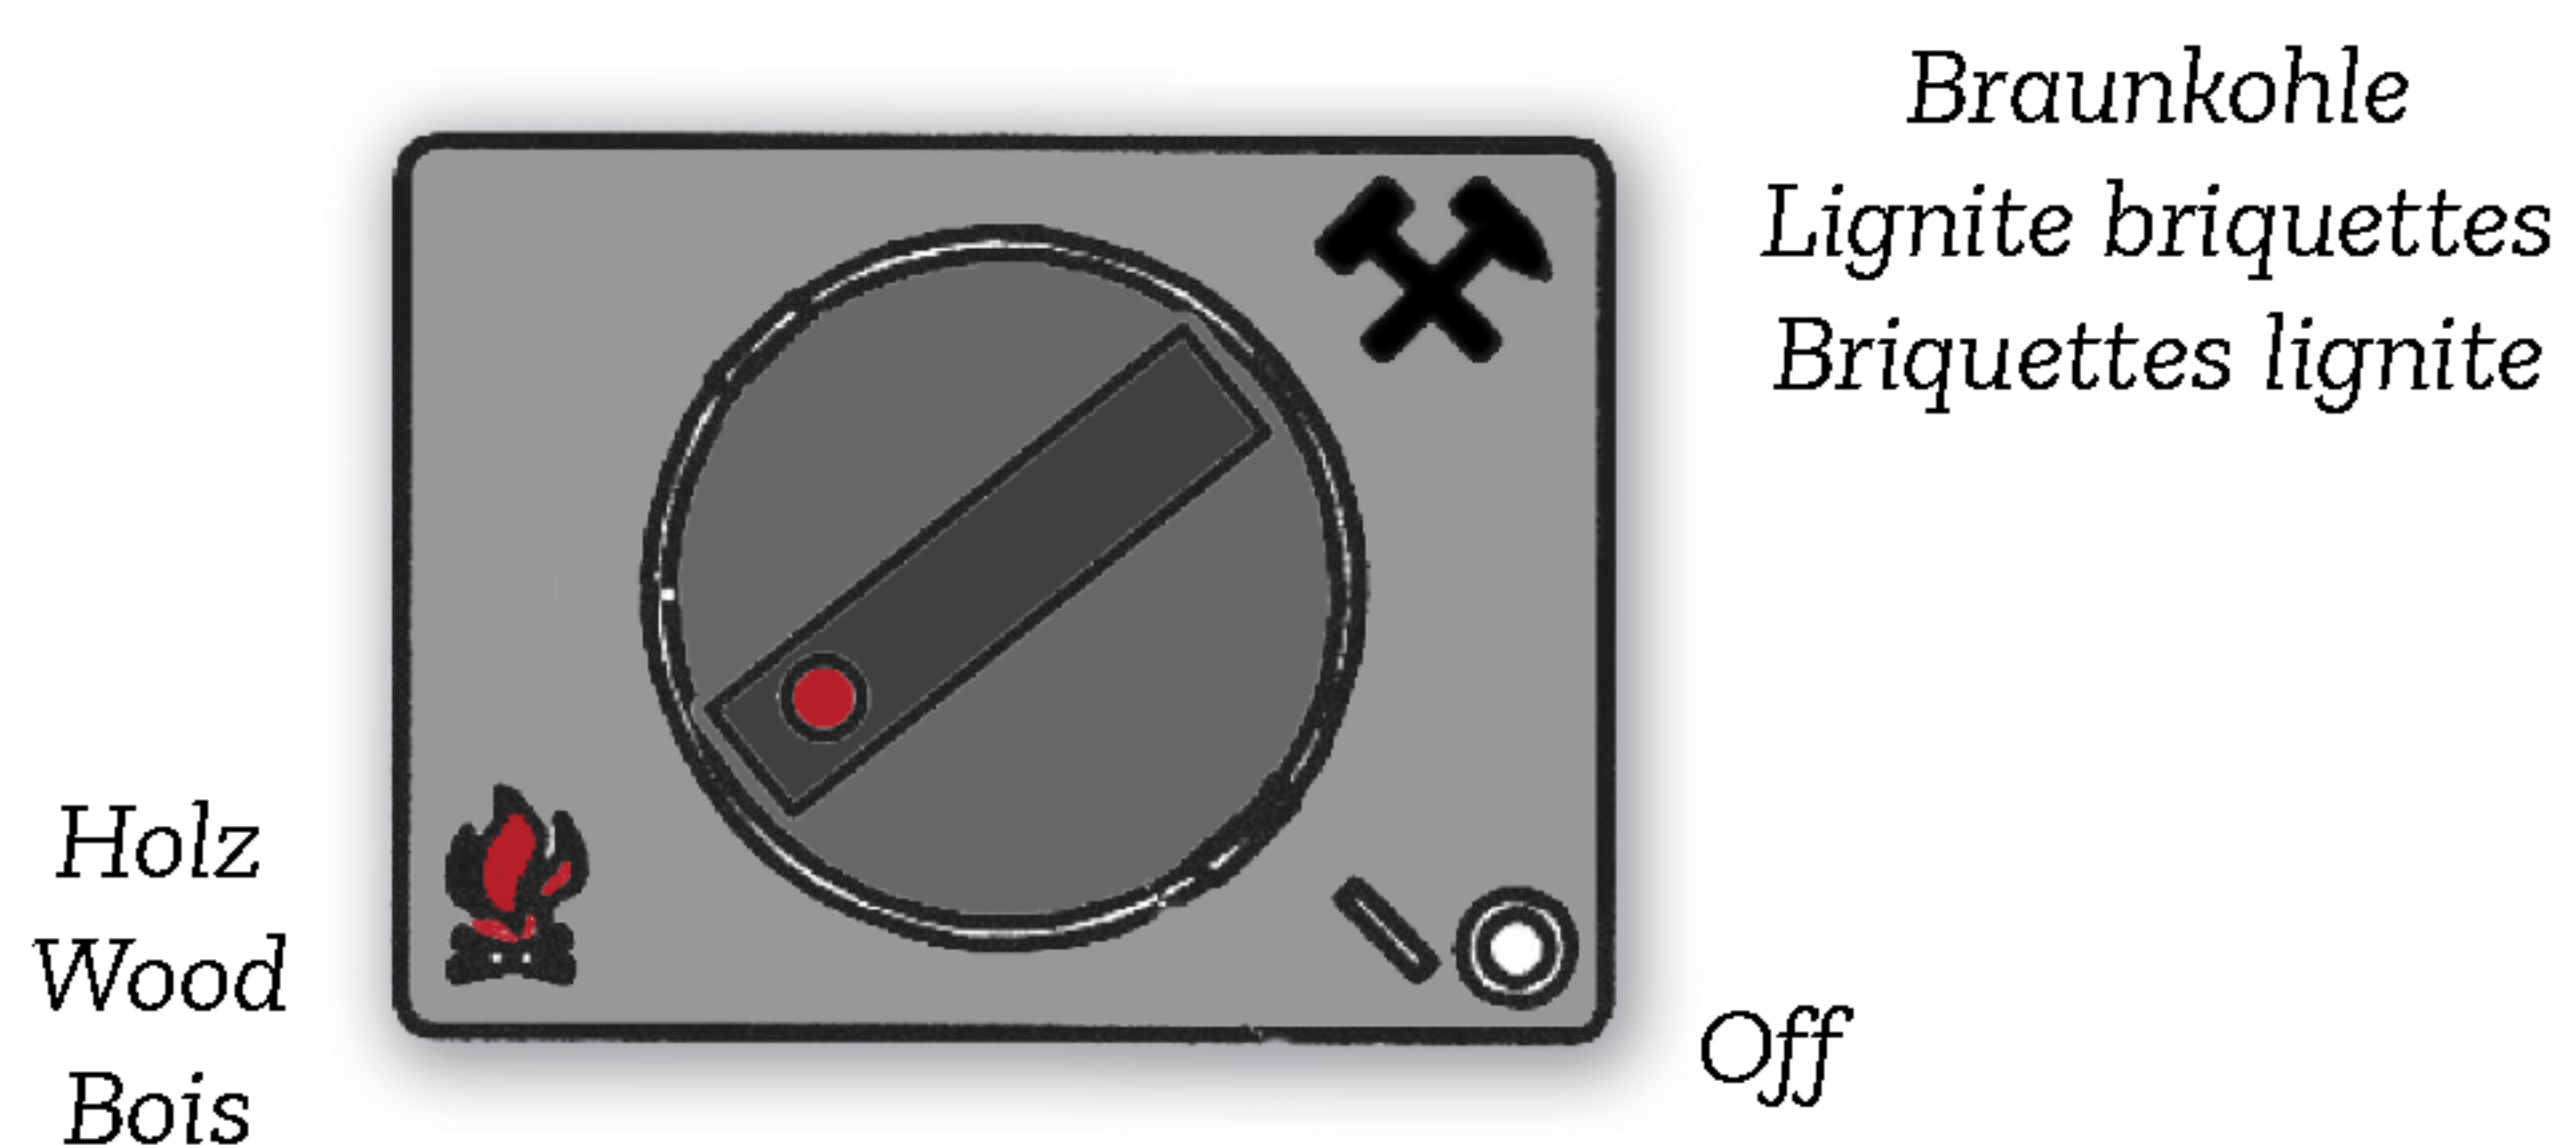

2.

Sekundärluftregler Start


Secondary air control / Régulateur d'air secondaire

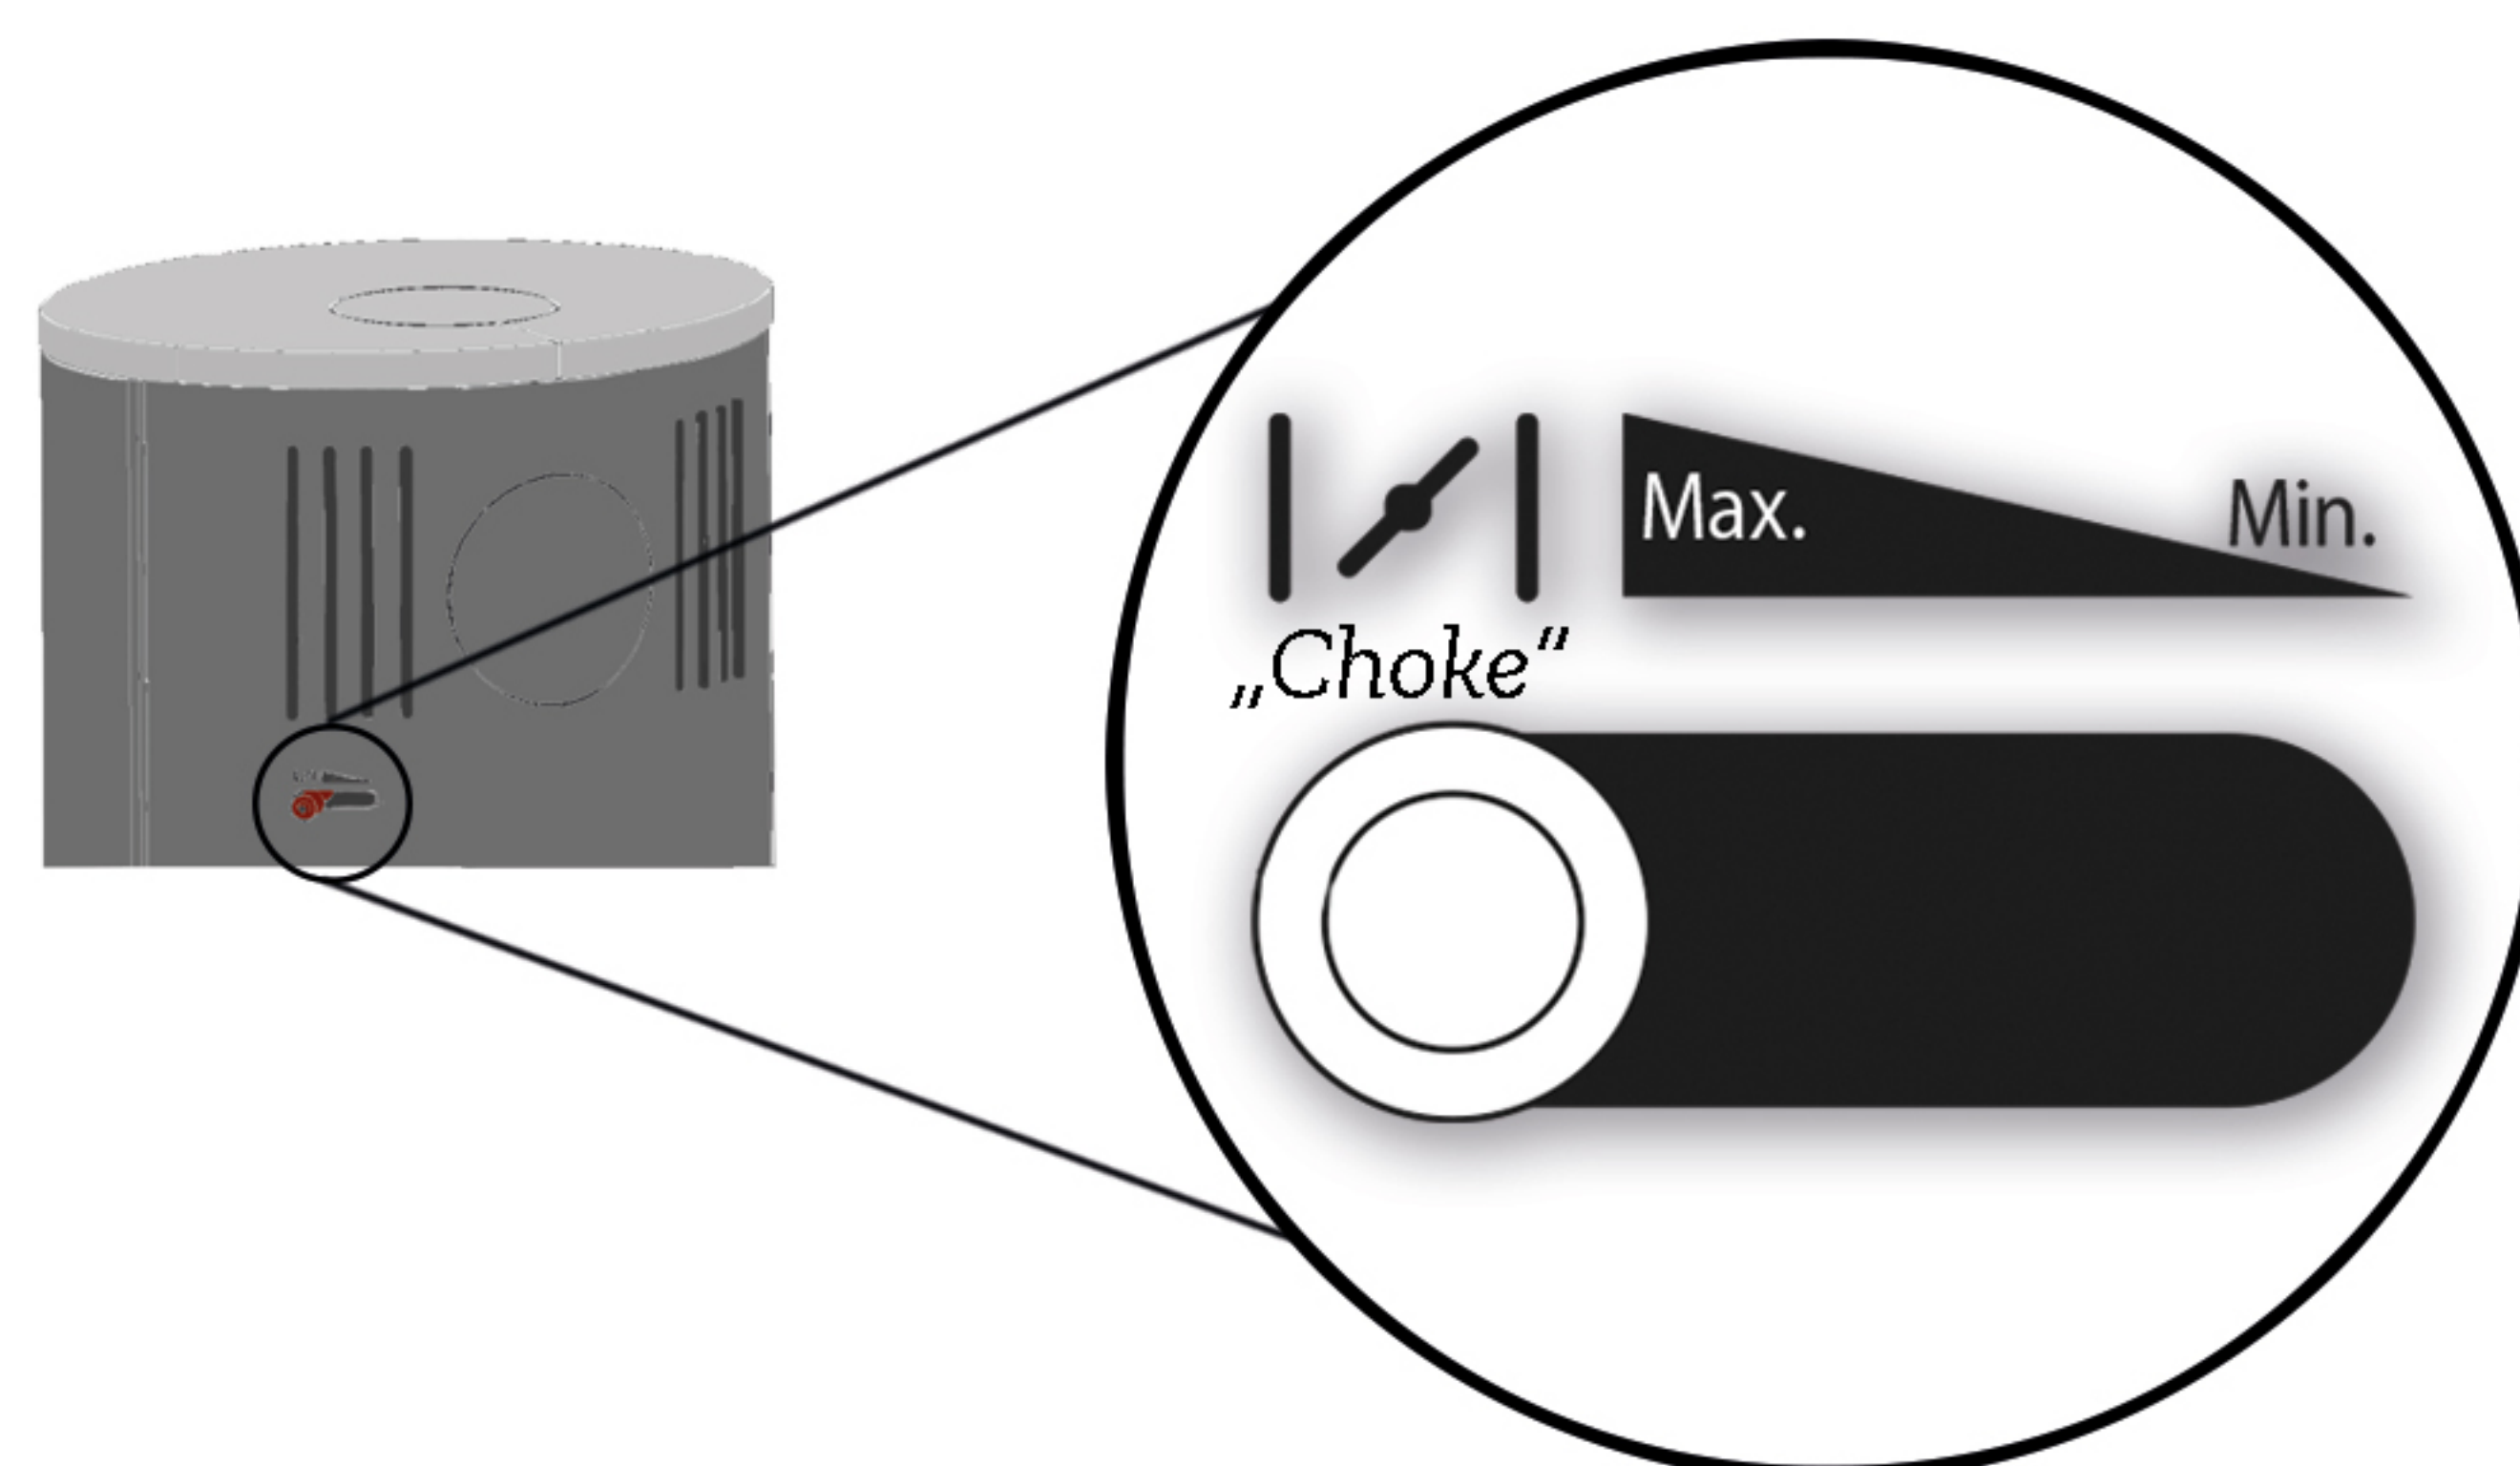

3.

Holz


Wood / Bois

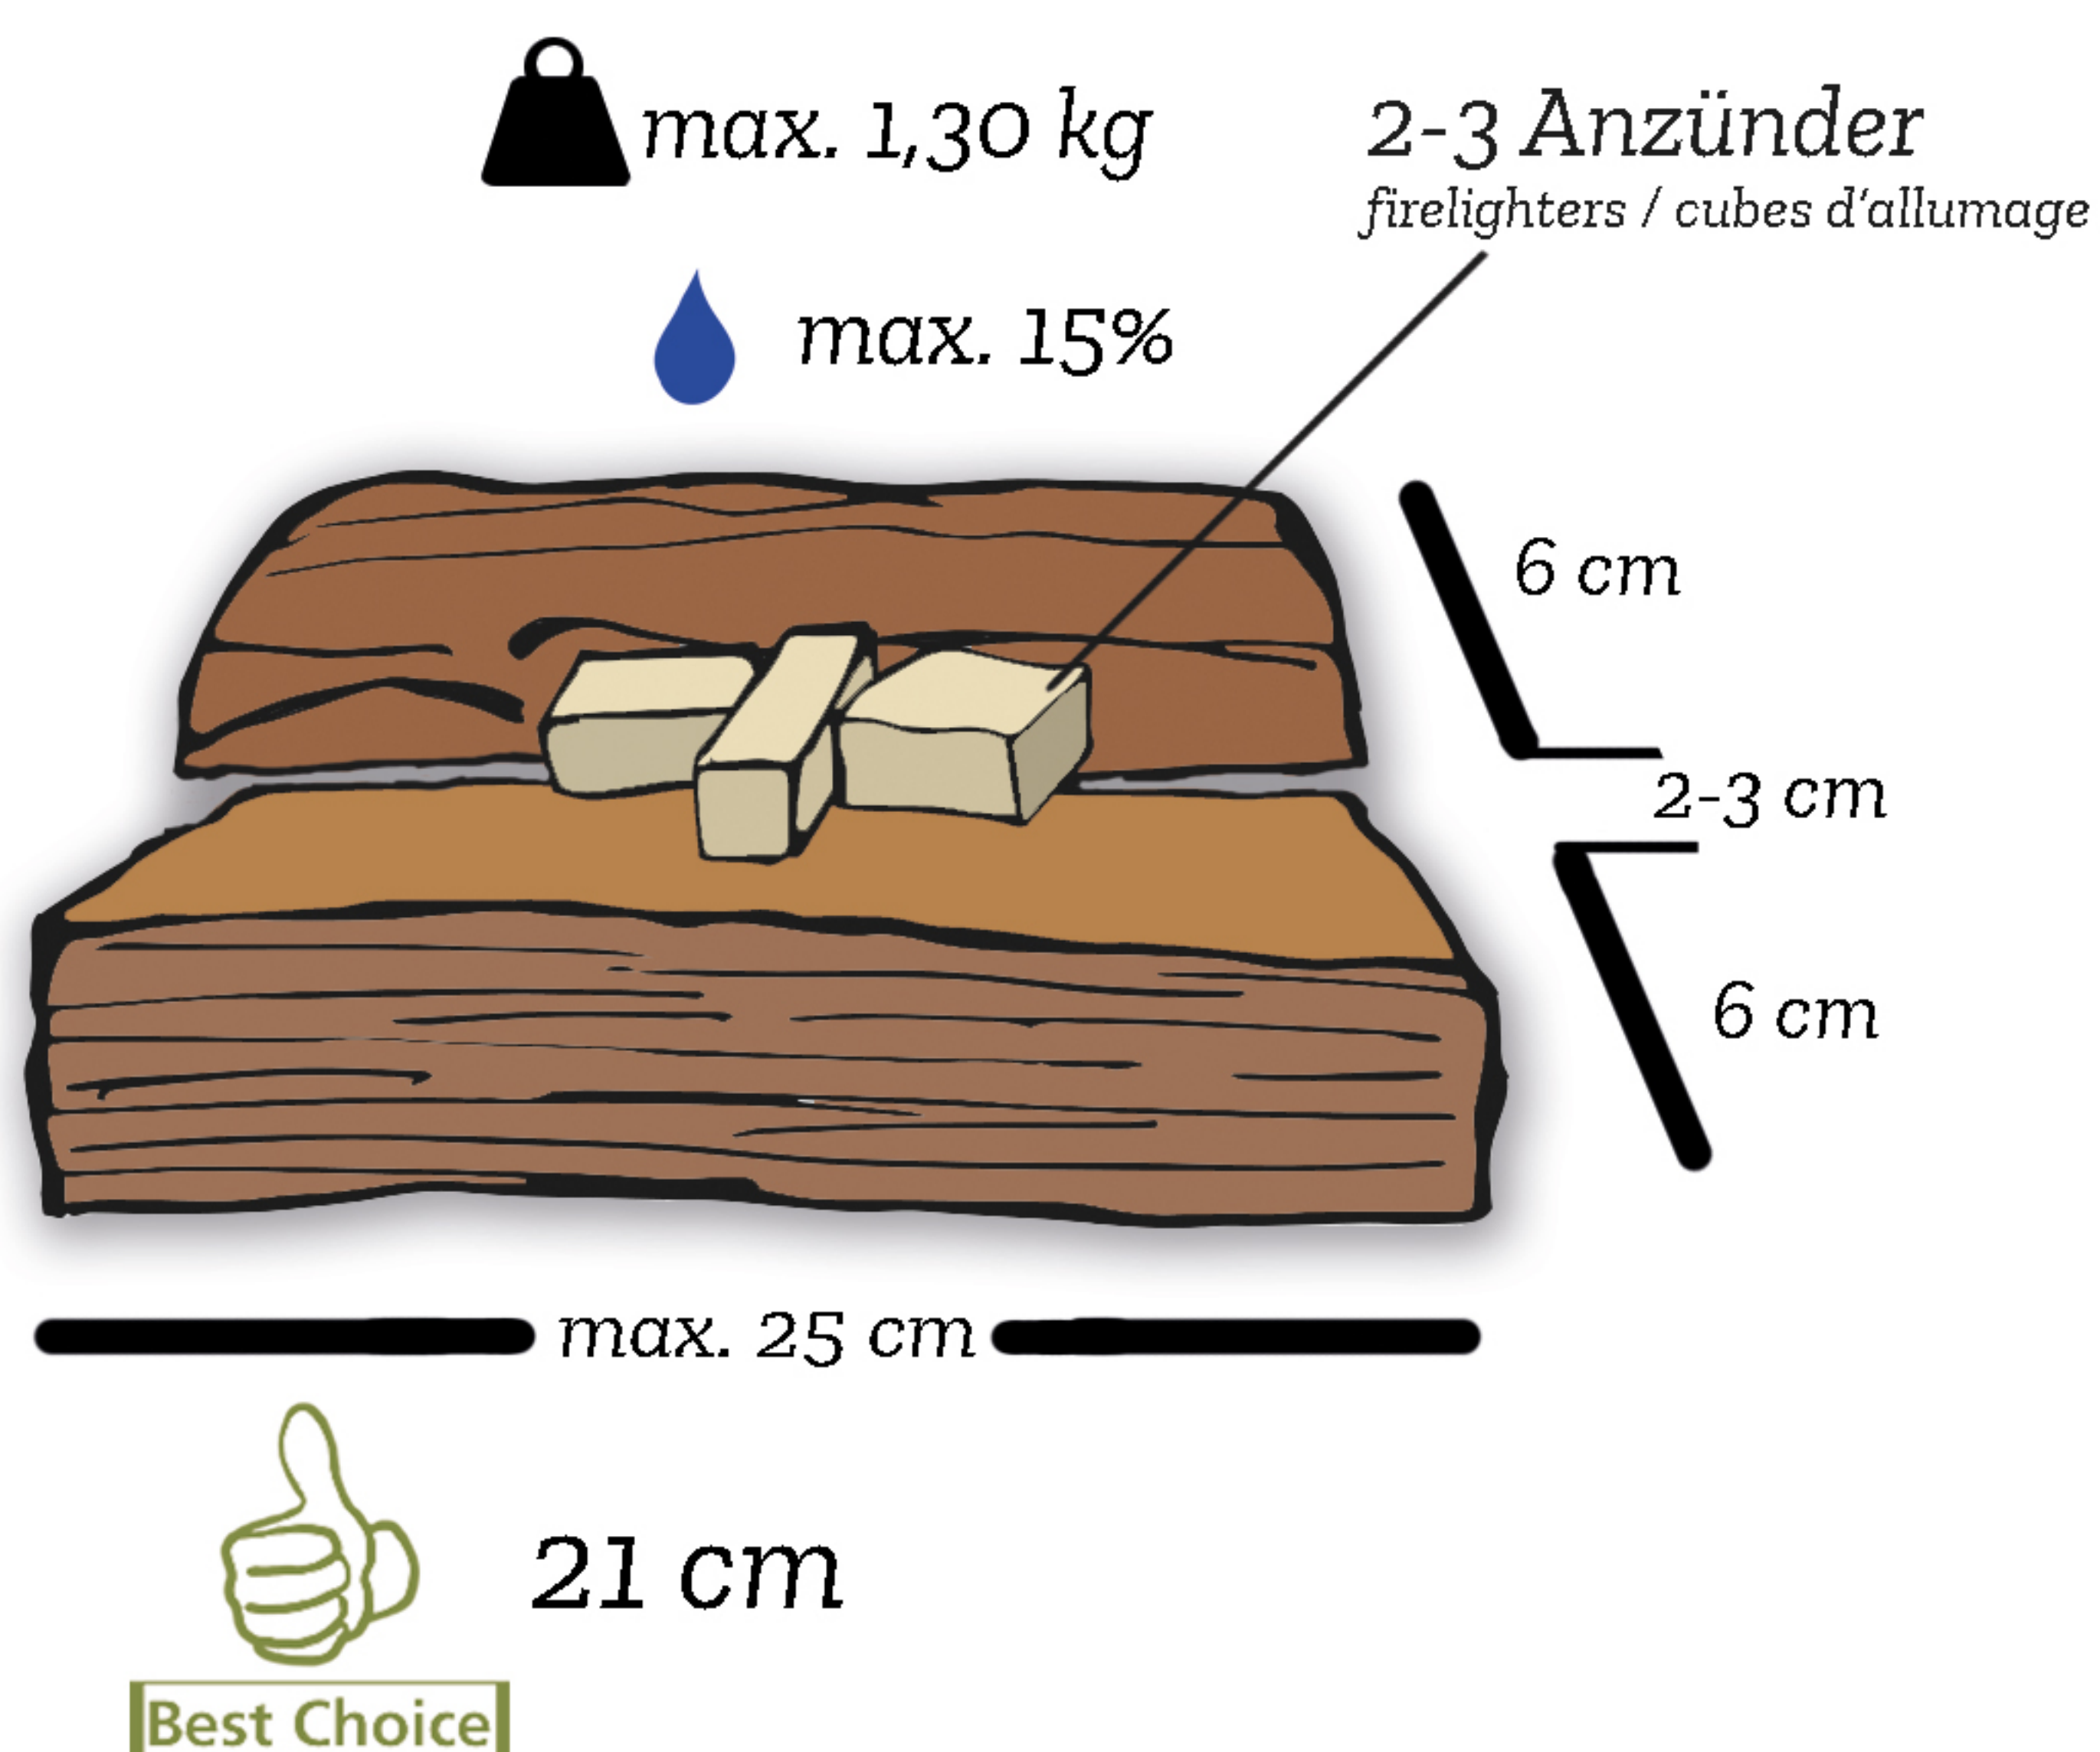

4.

Stapeln + anzünden



Stacking + lighting / Empiler + allumer

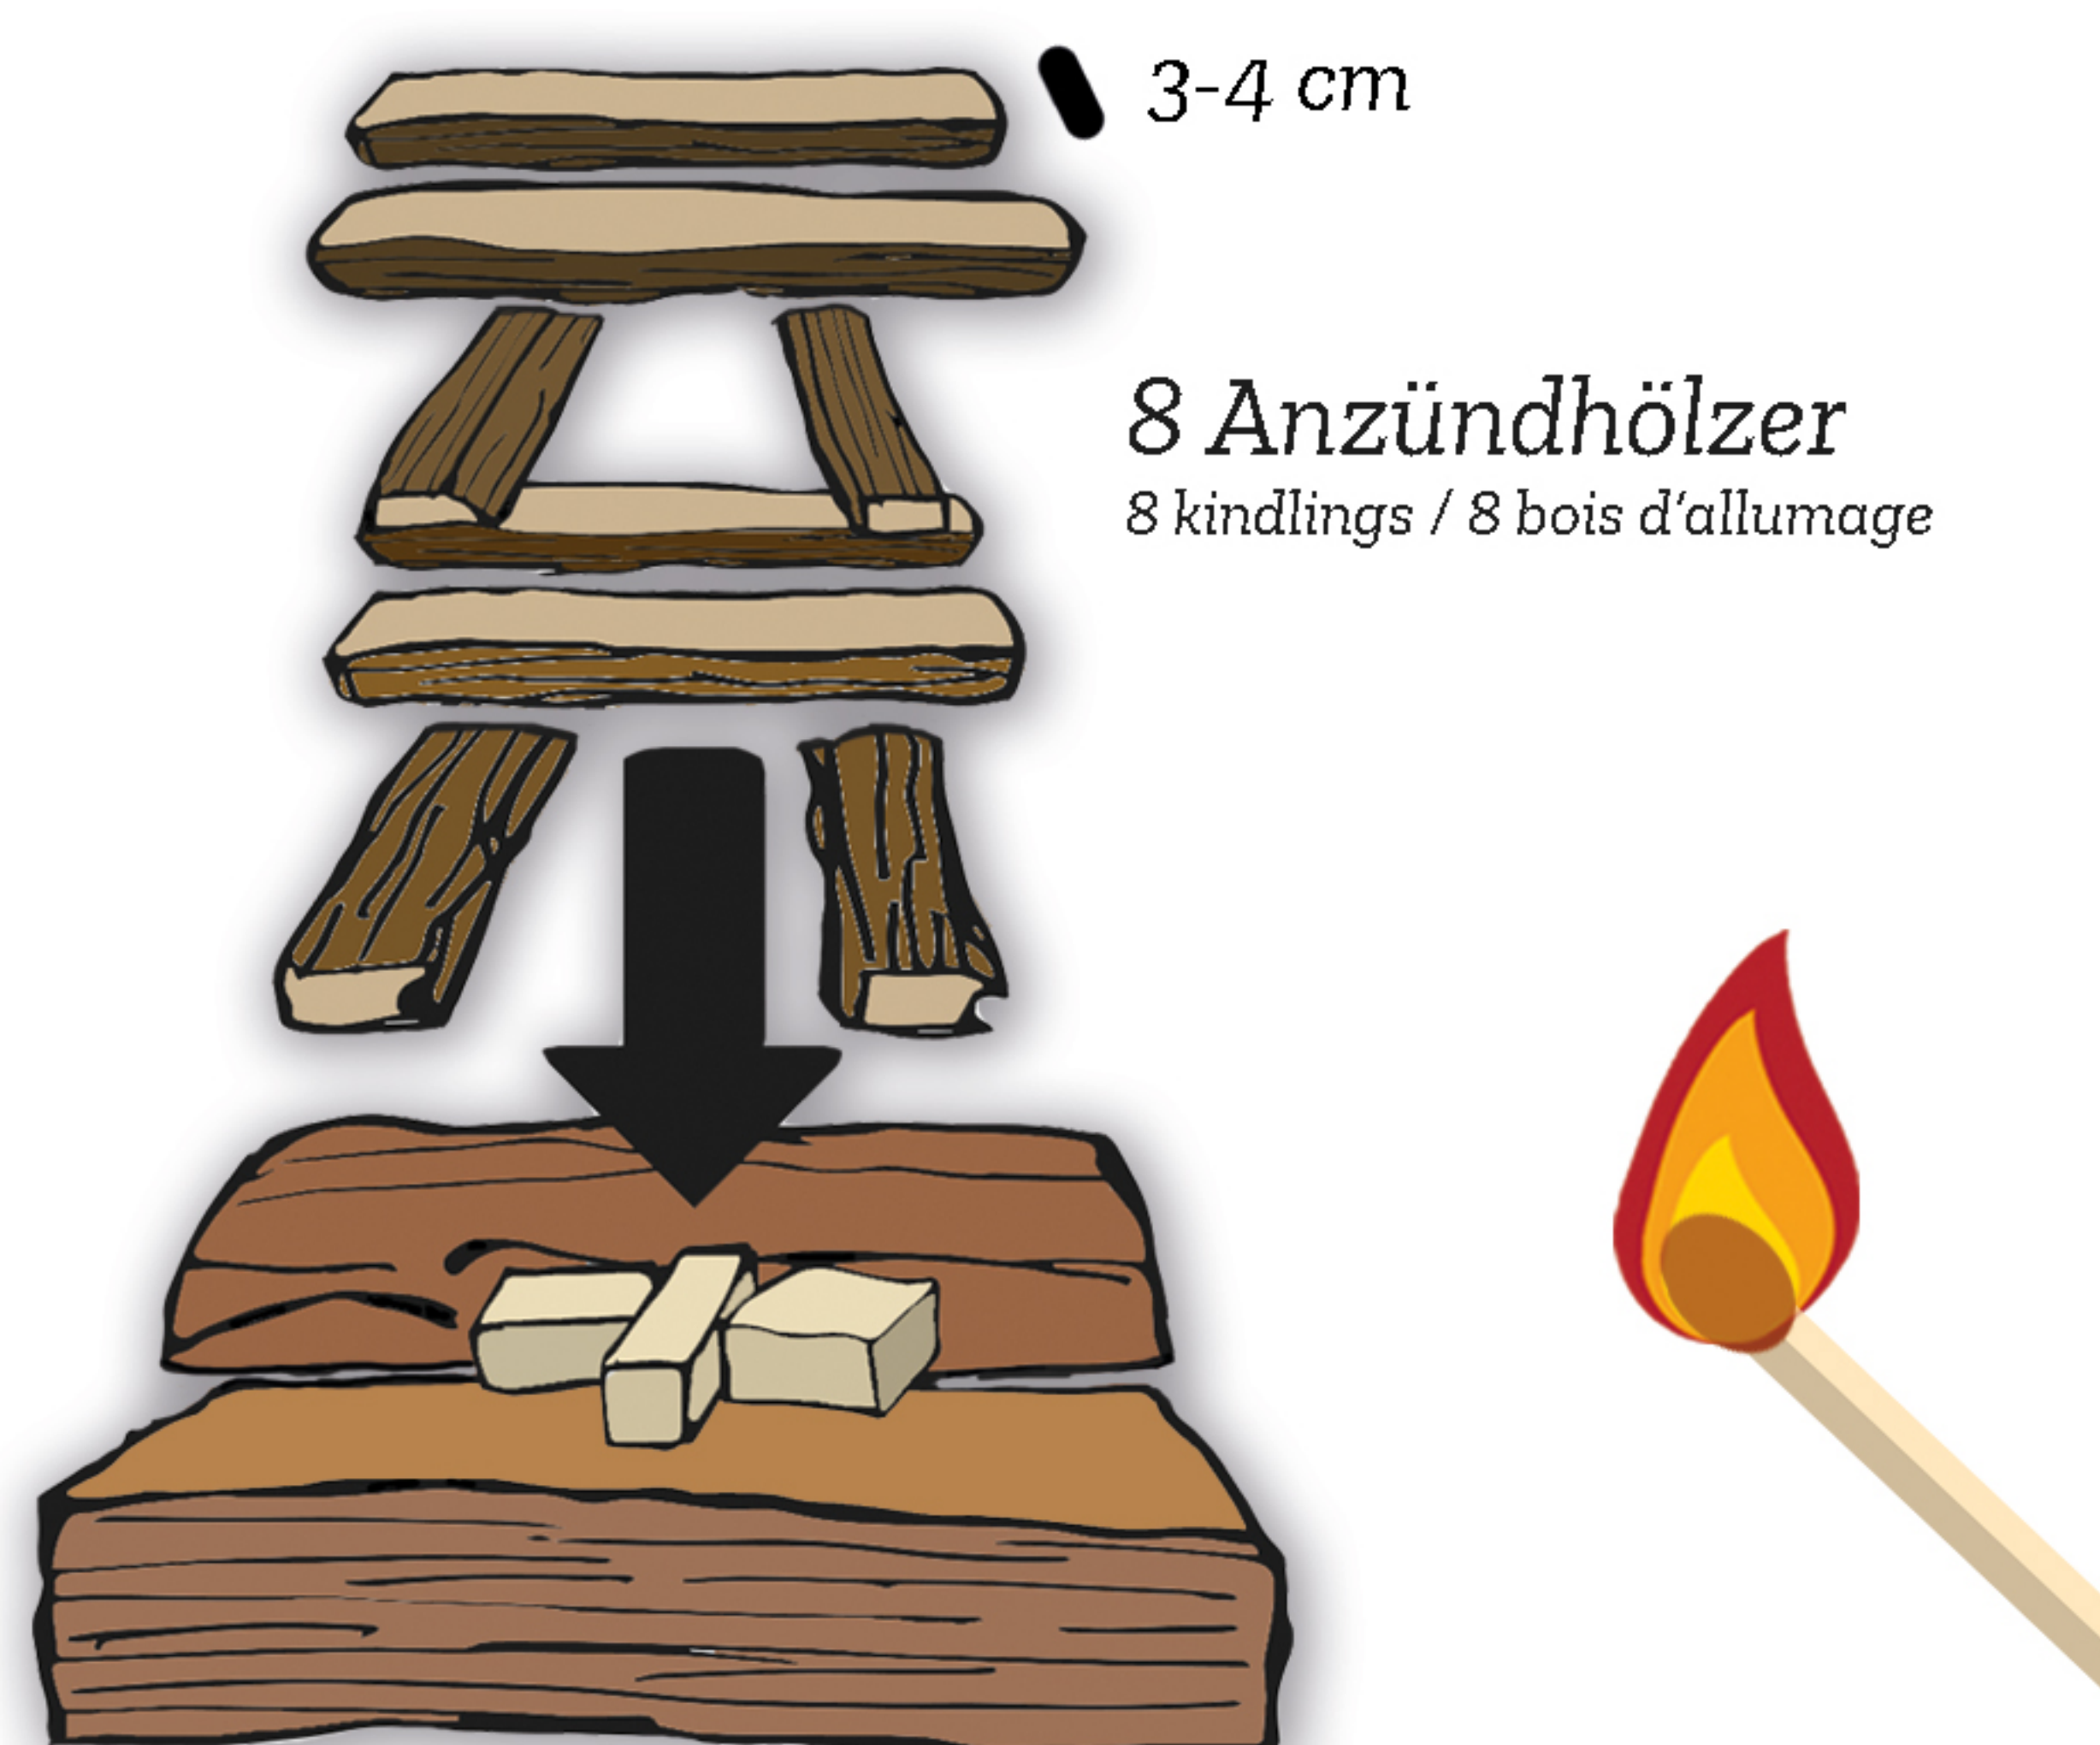

5.

Luft drosseln


Reduce air / Réduire l'air

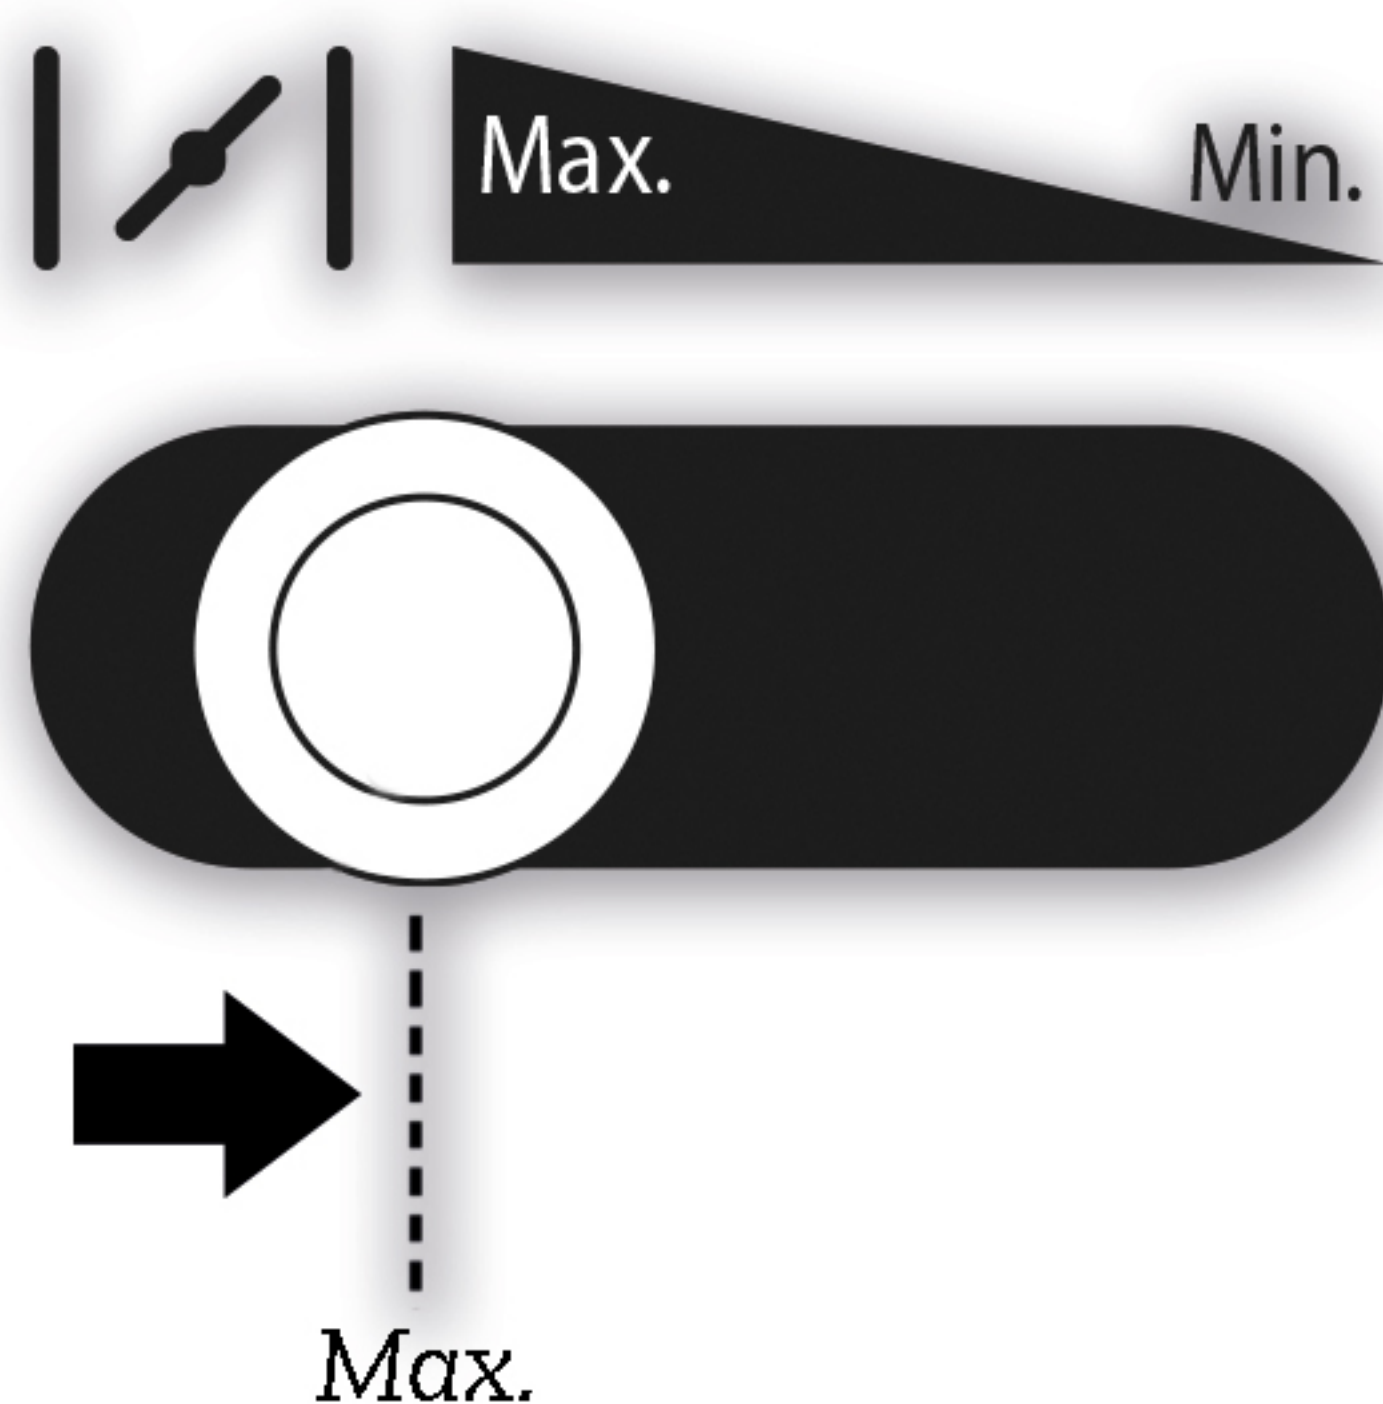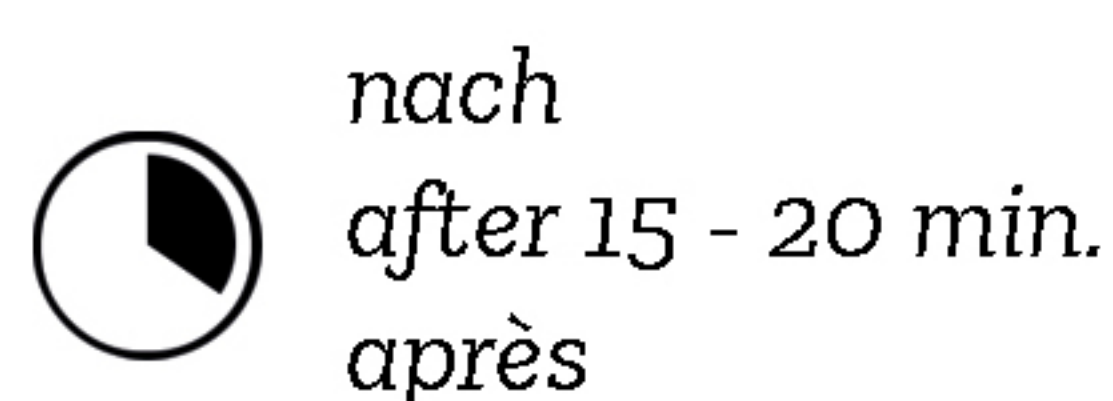

6.

Holz nachlegen

Stoke fire with wood / Recharger le bois

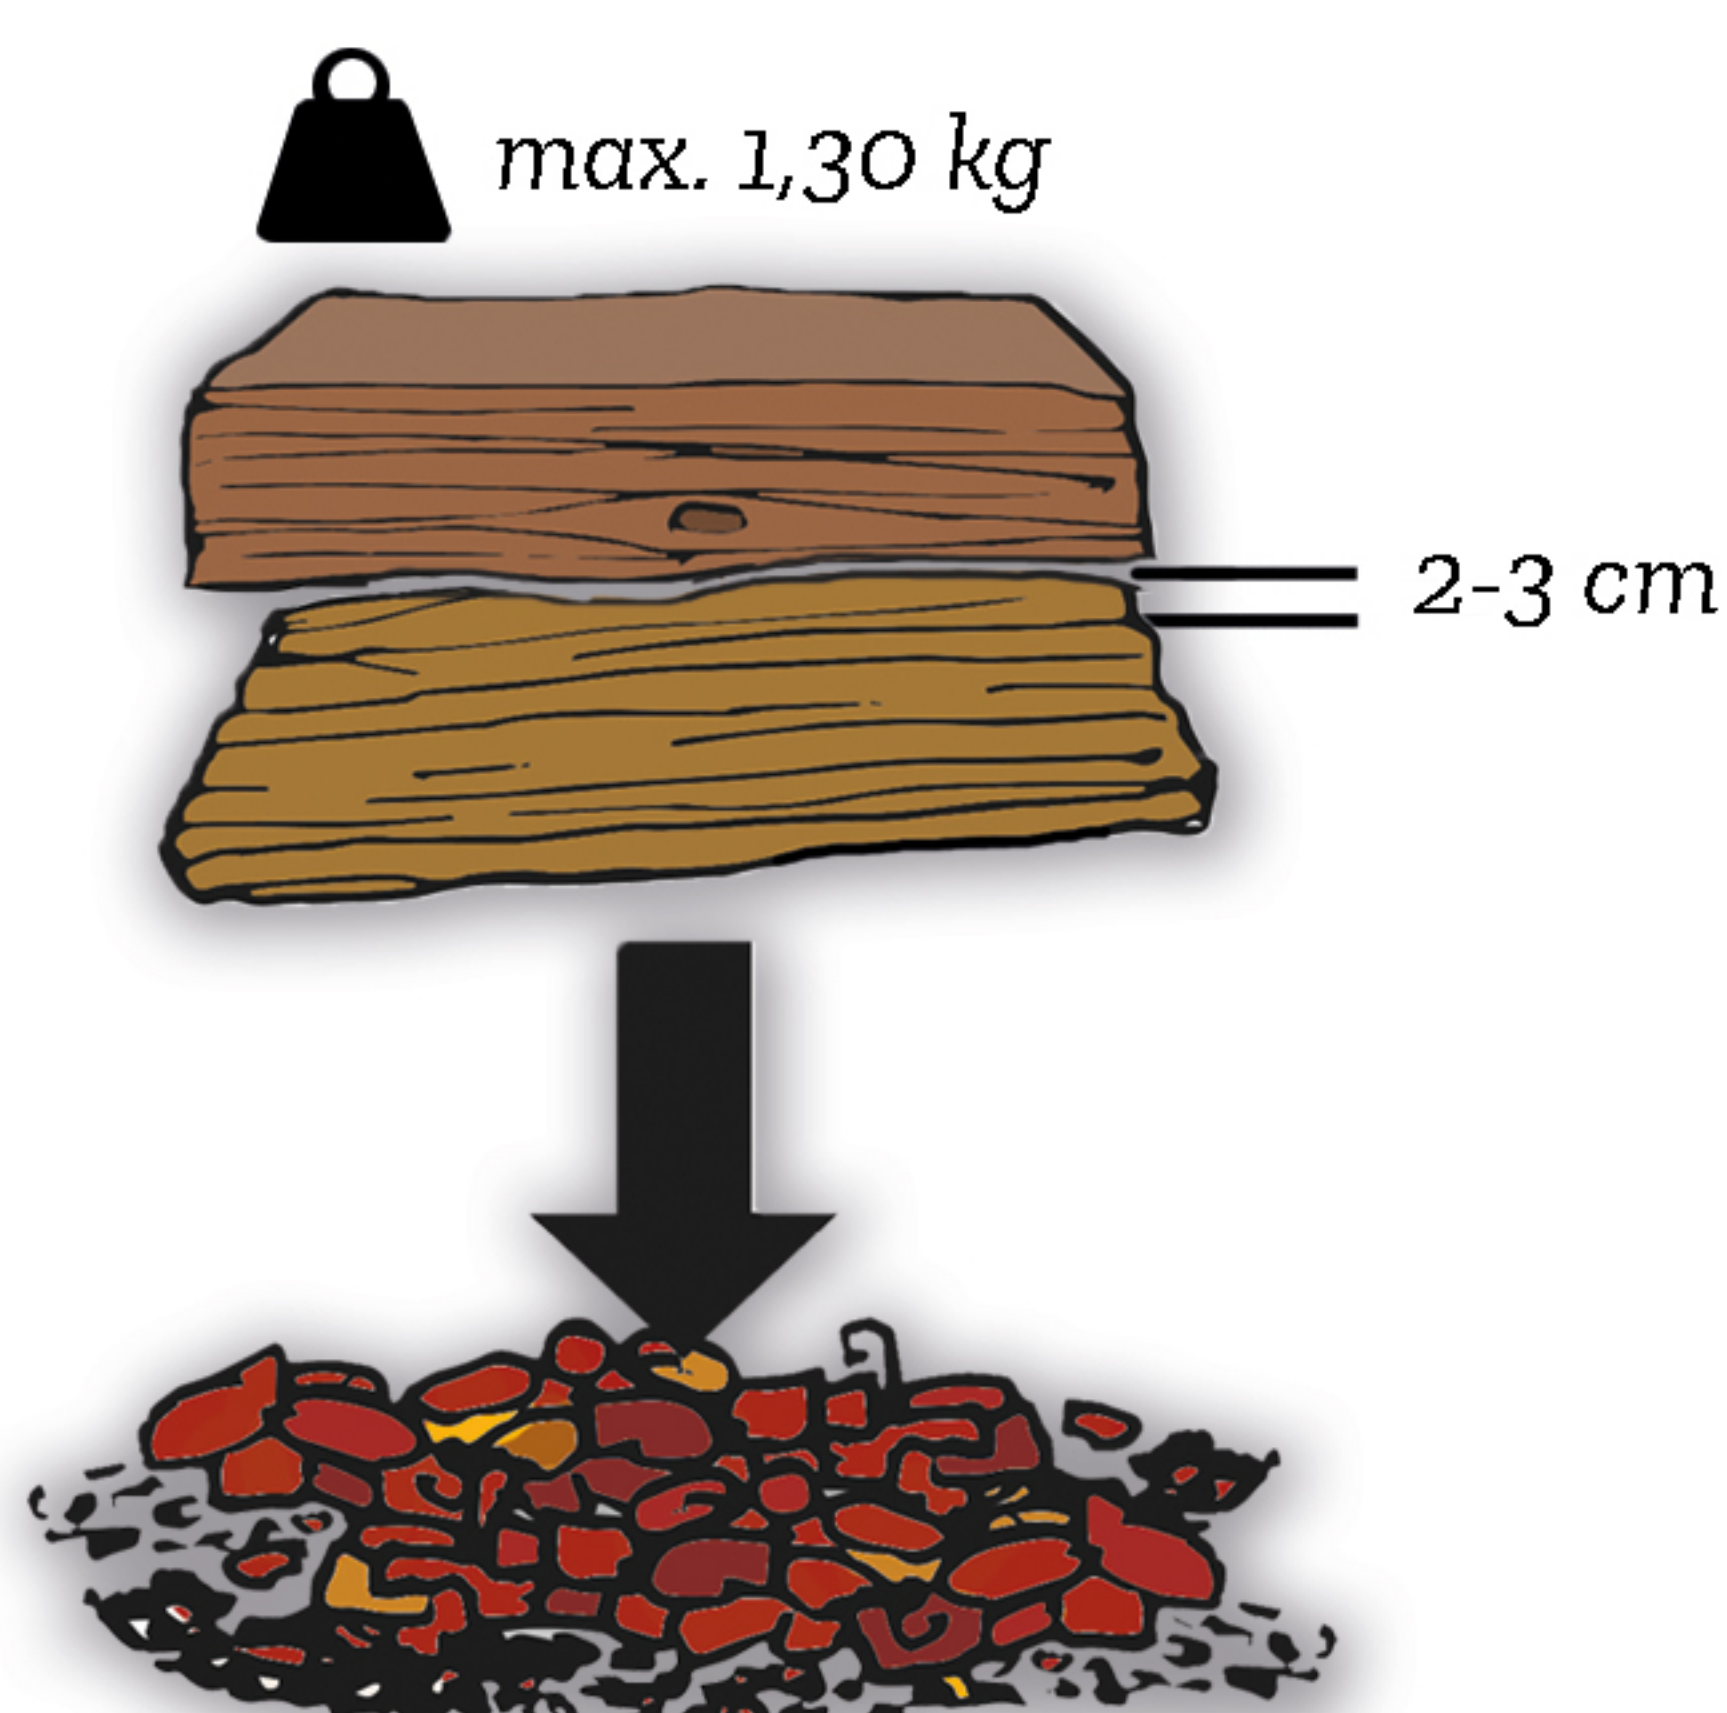

ORANIER


Kurzanleitung / Quick start Guide / Guide rapide

Heizen mit Holz / Heating with wood / Chauffer au bois

7.

Sekundärluft einstellen



Secondary air control / Ajuster l'air secondaire

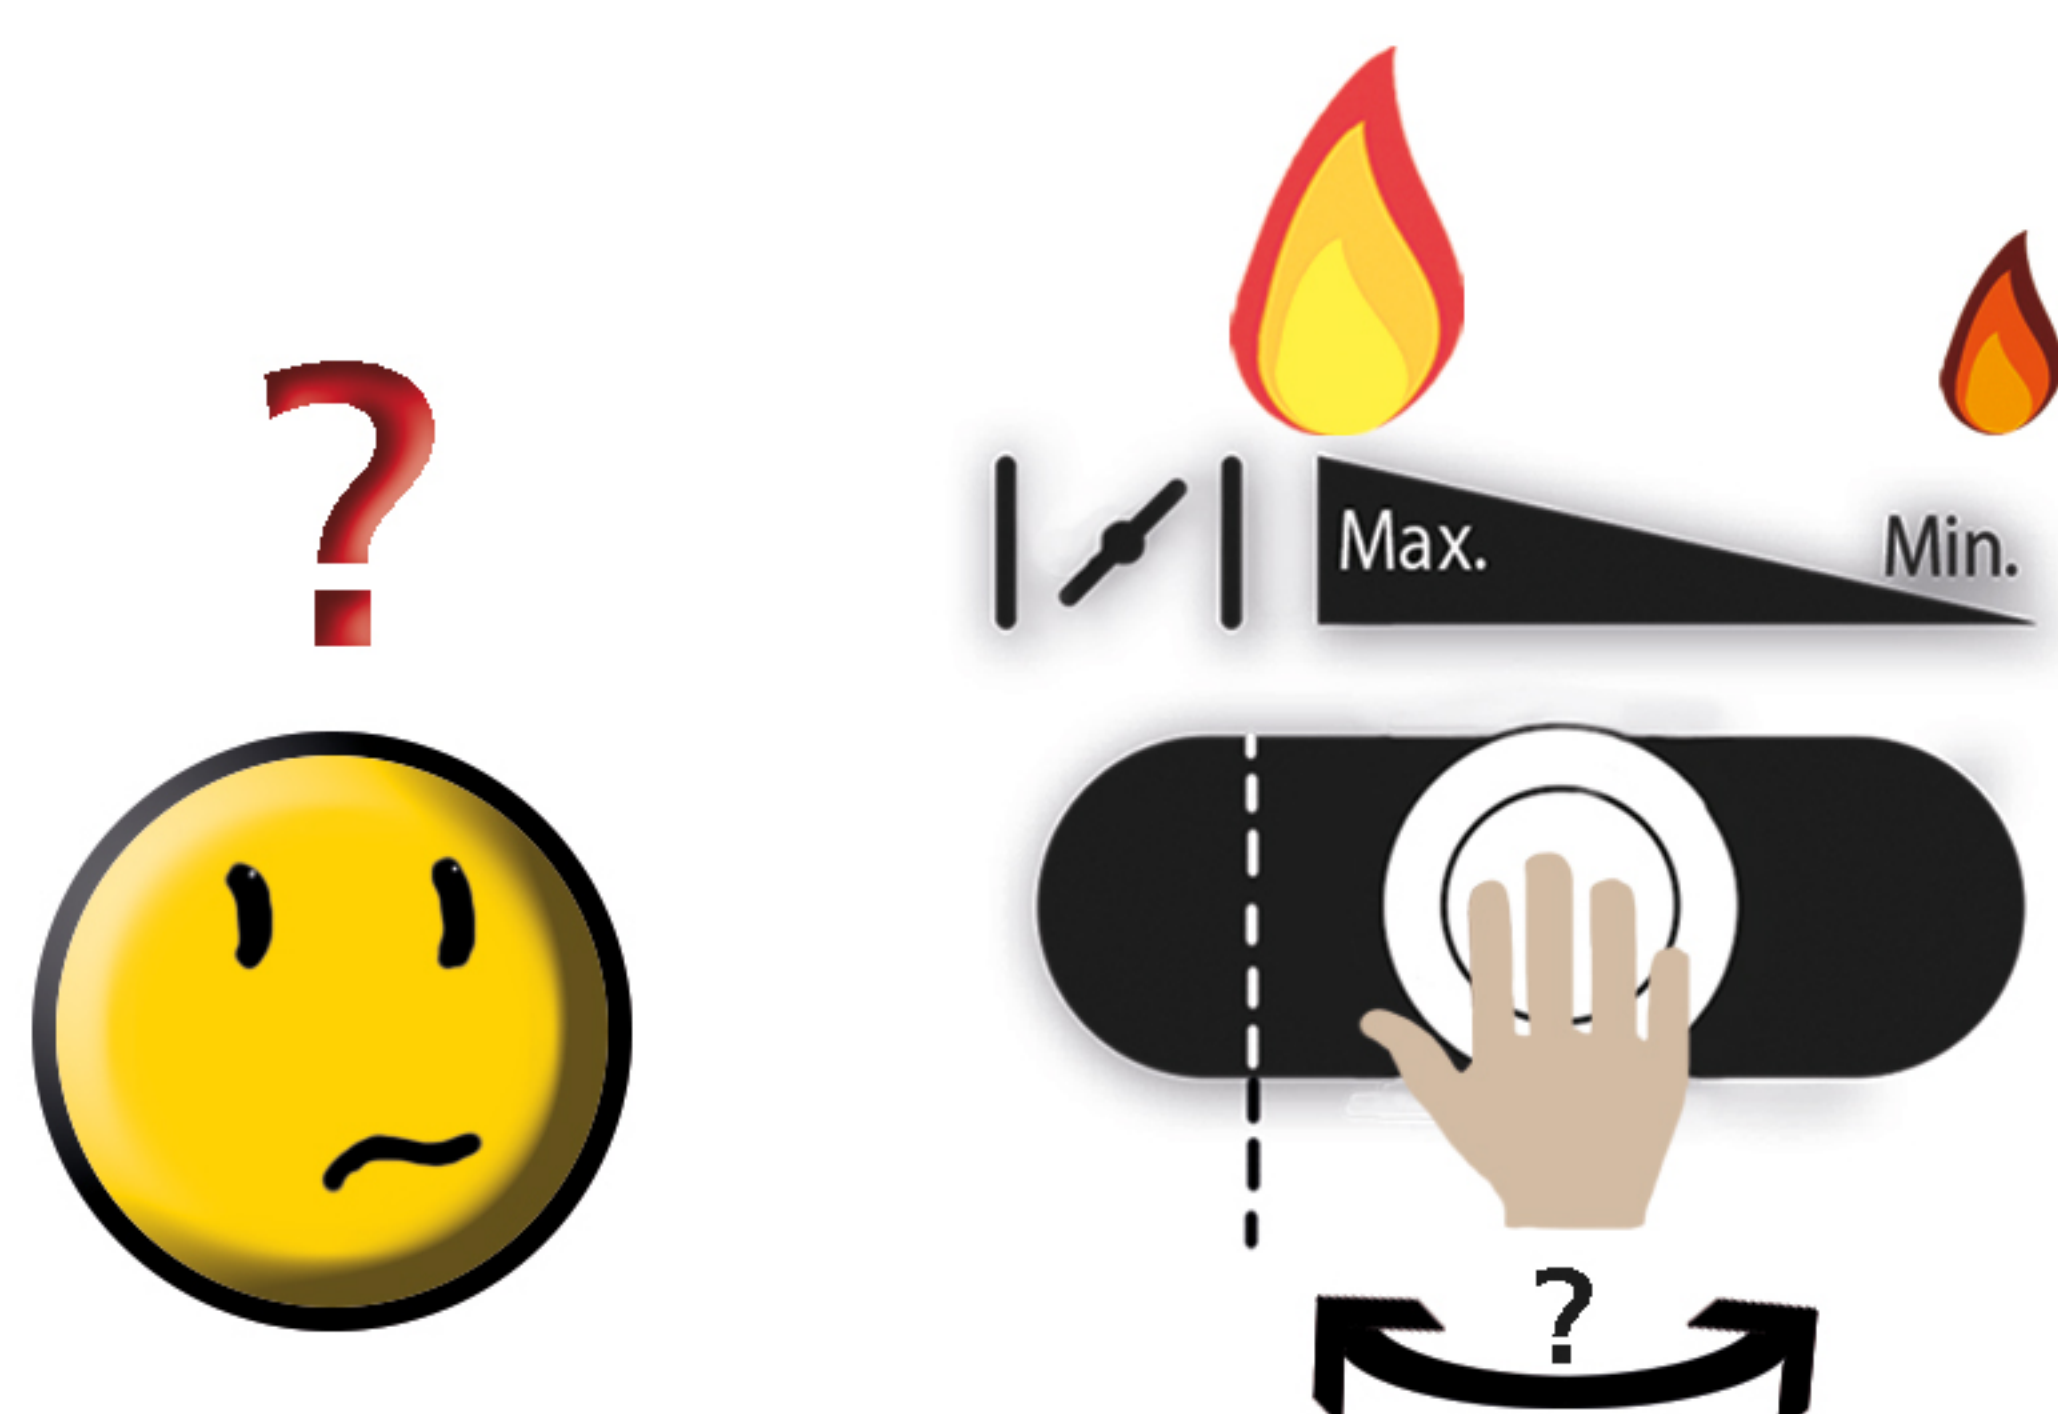

8.

Beenden



End / Terminer

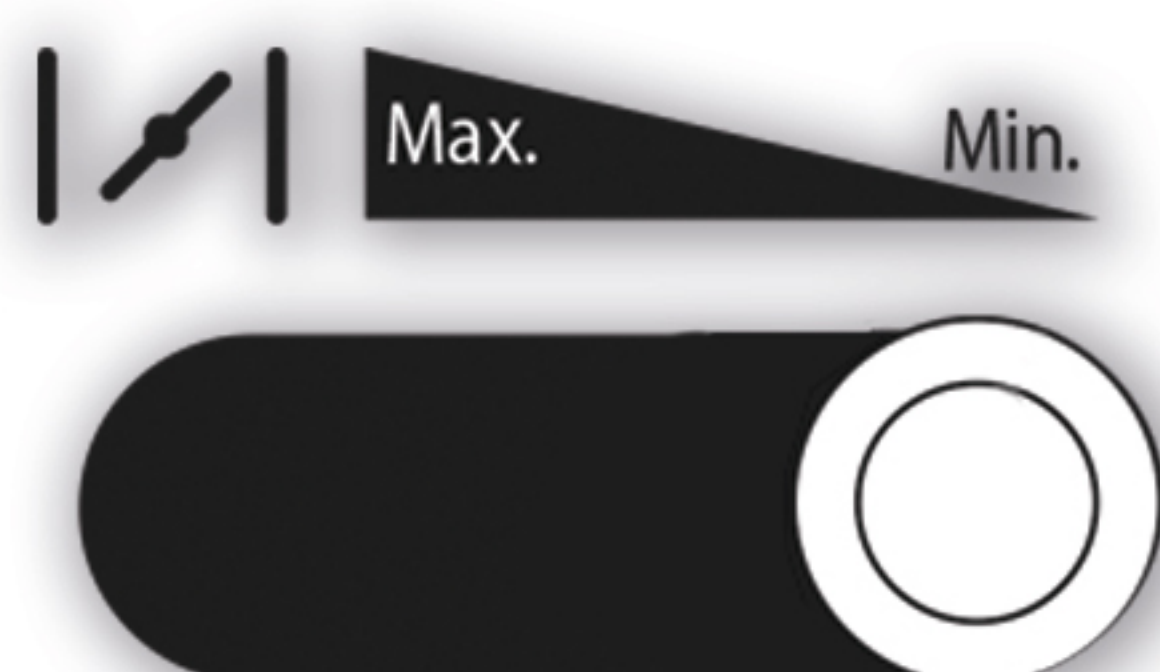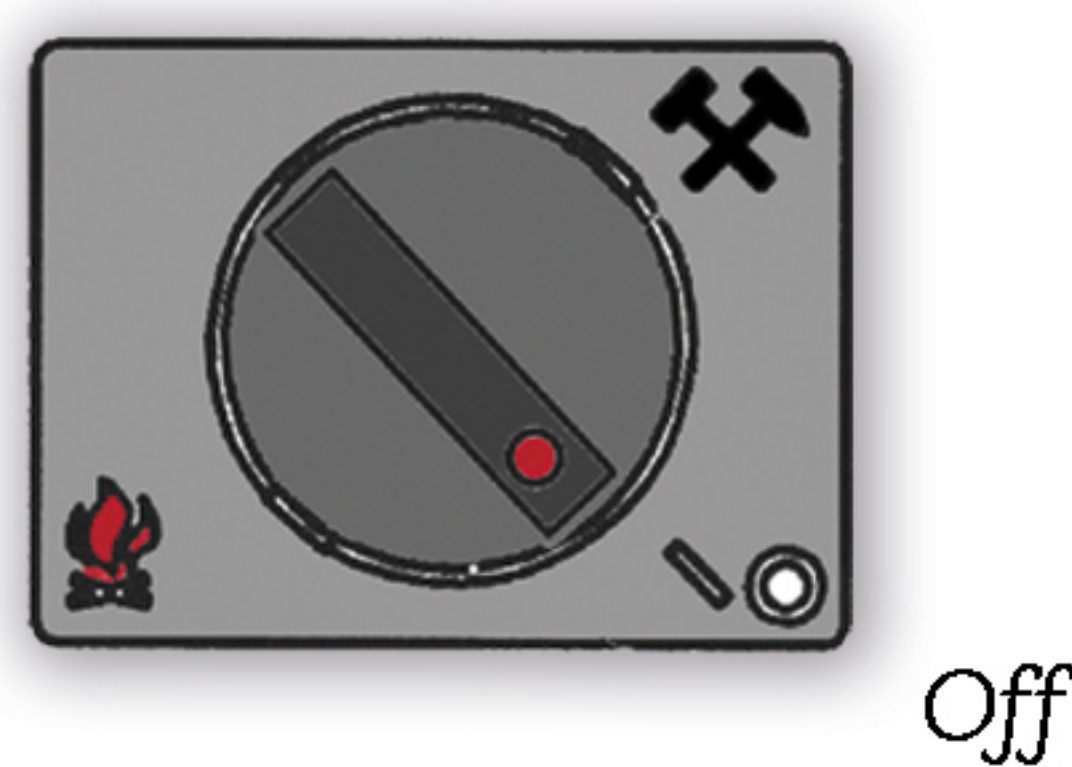



9.

Reinigung

Cleaning / Nettoyage

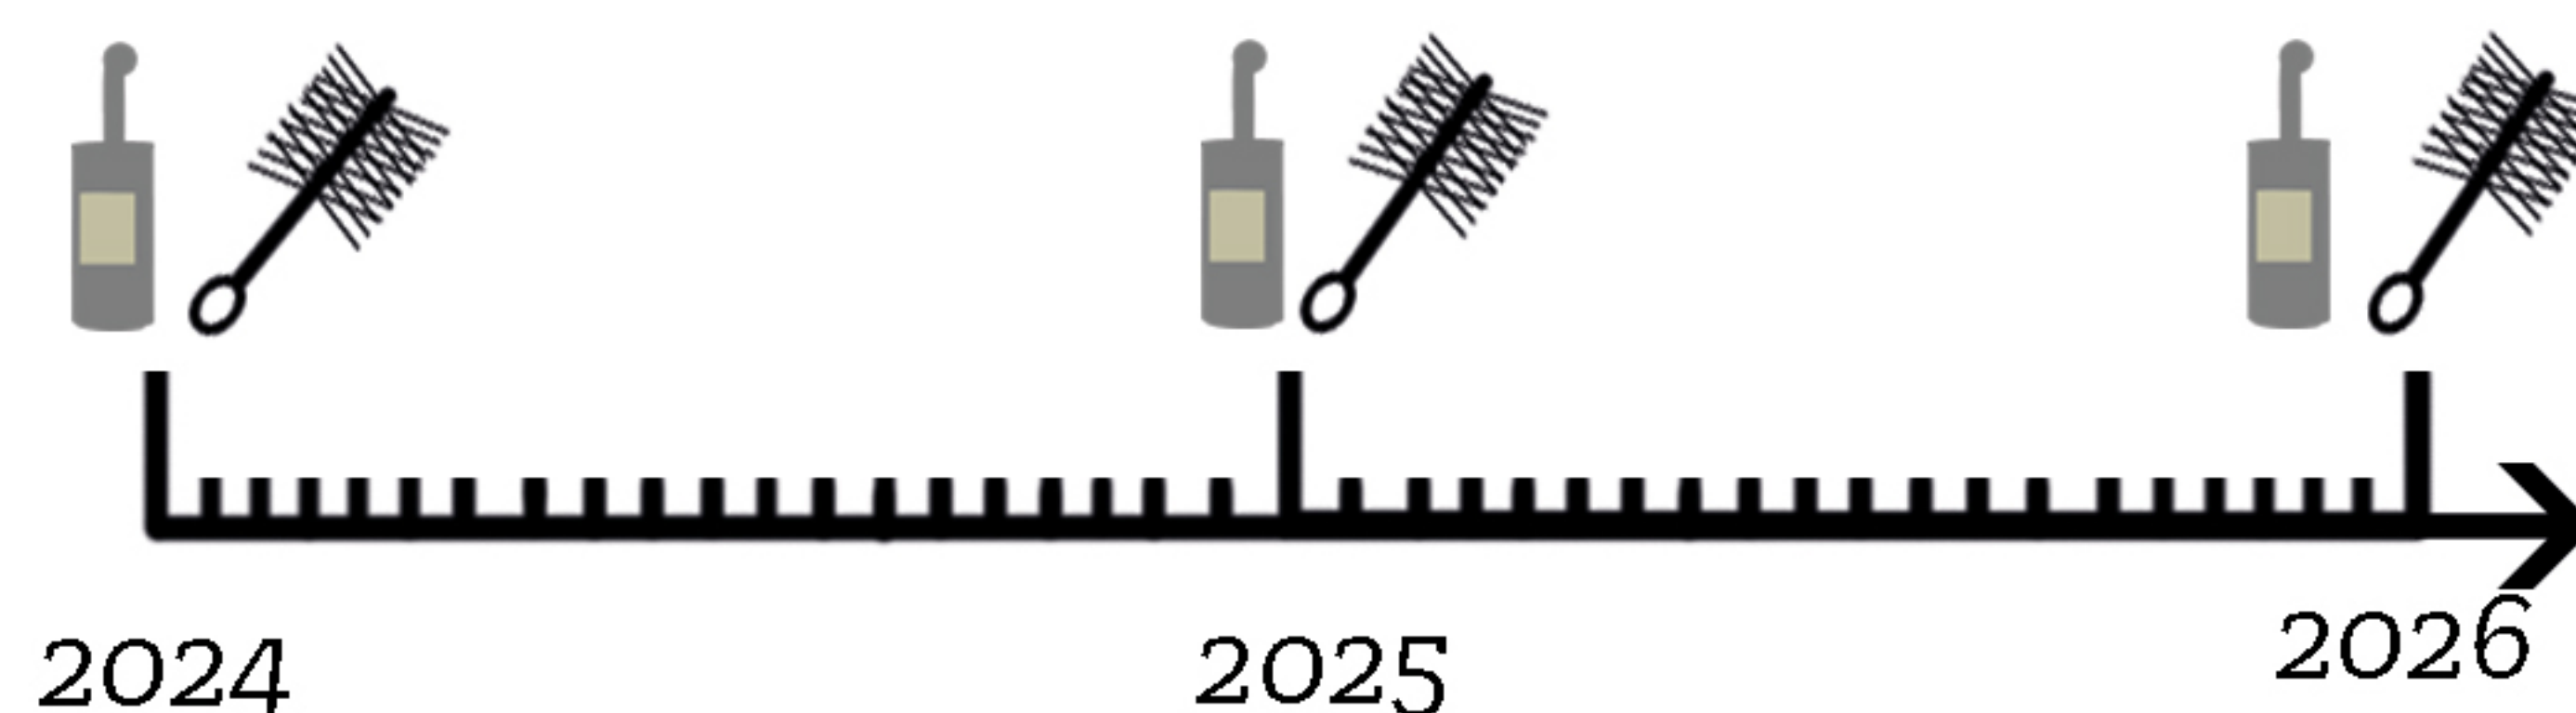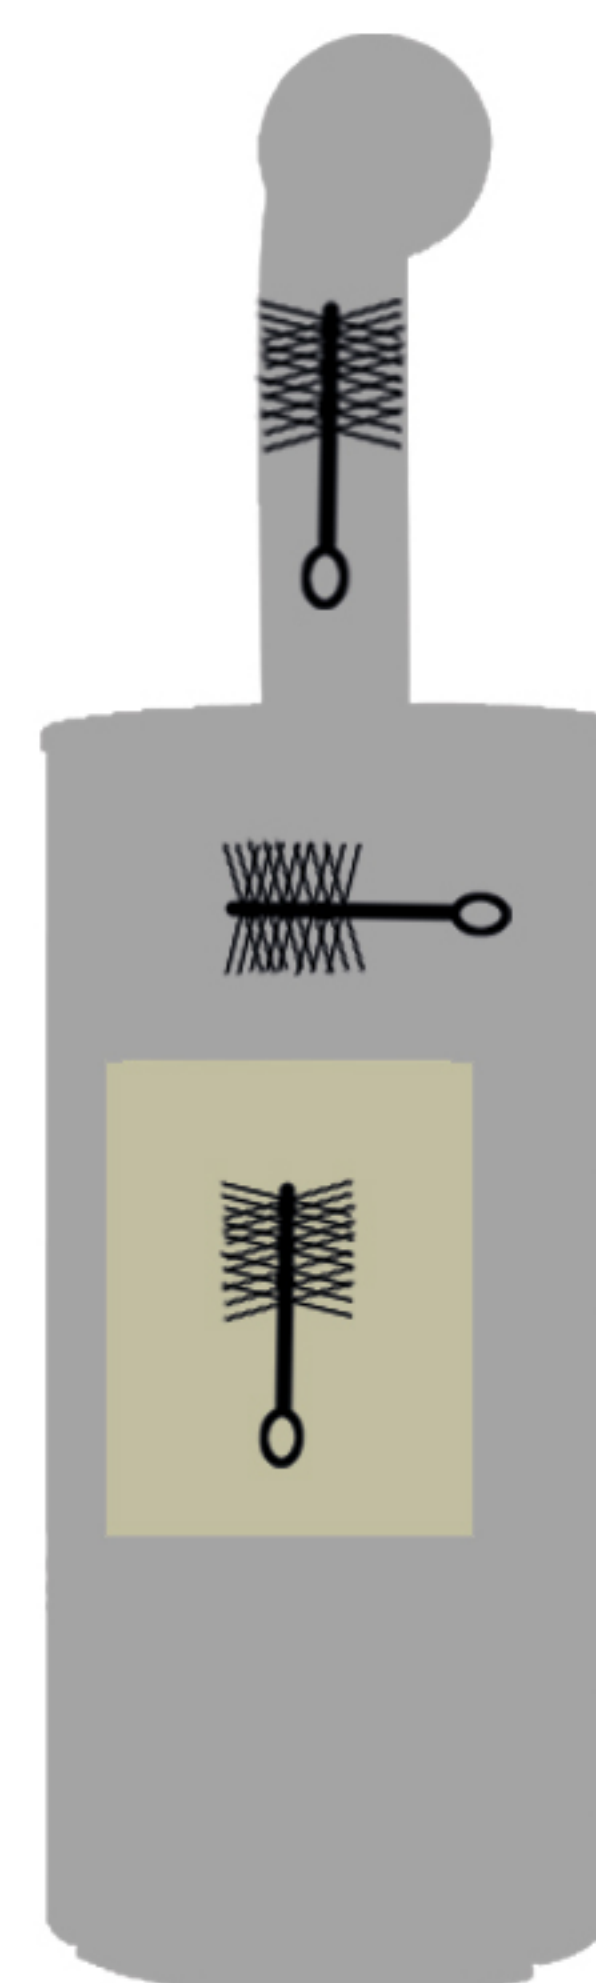

5564 Polar Neo 4 R II 2937794000

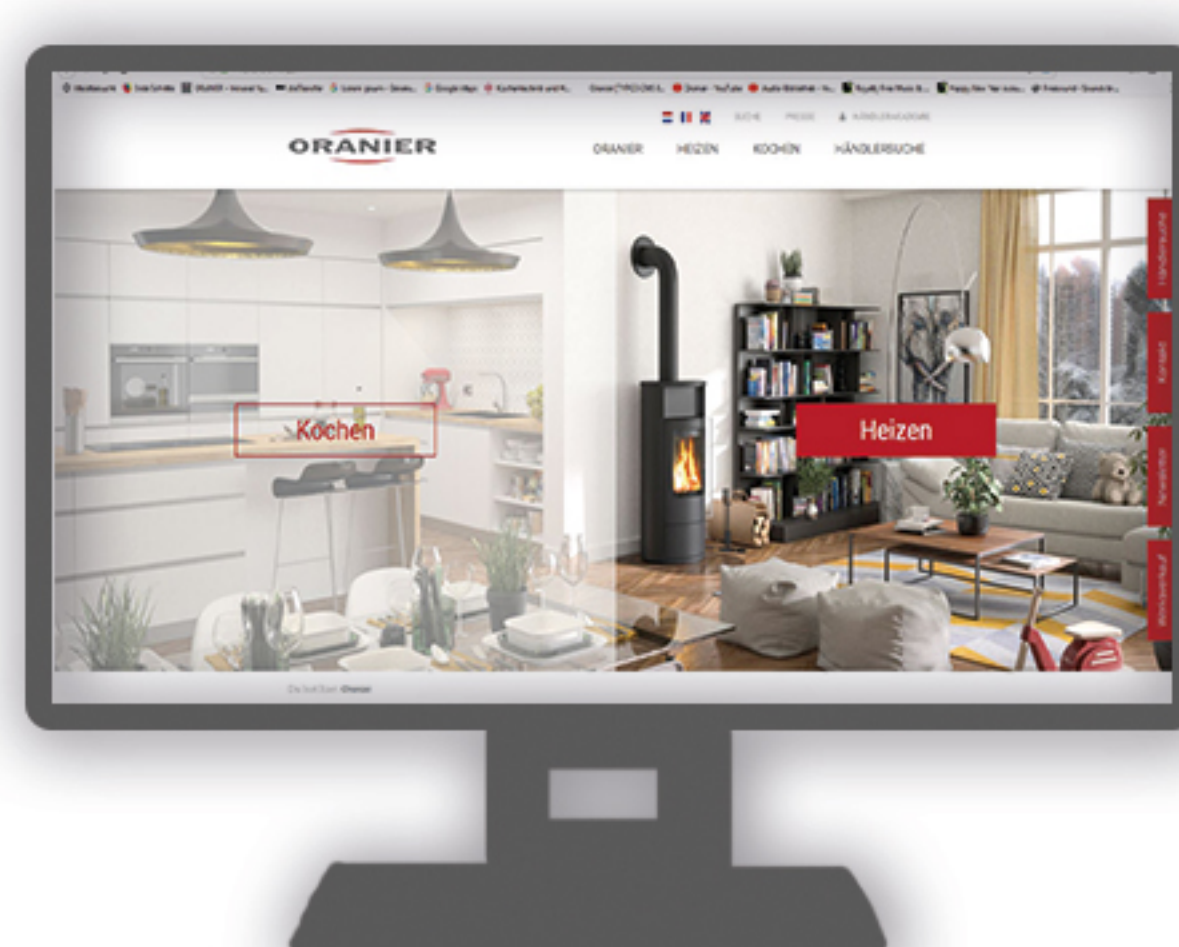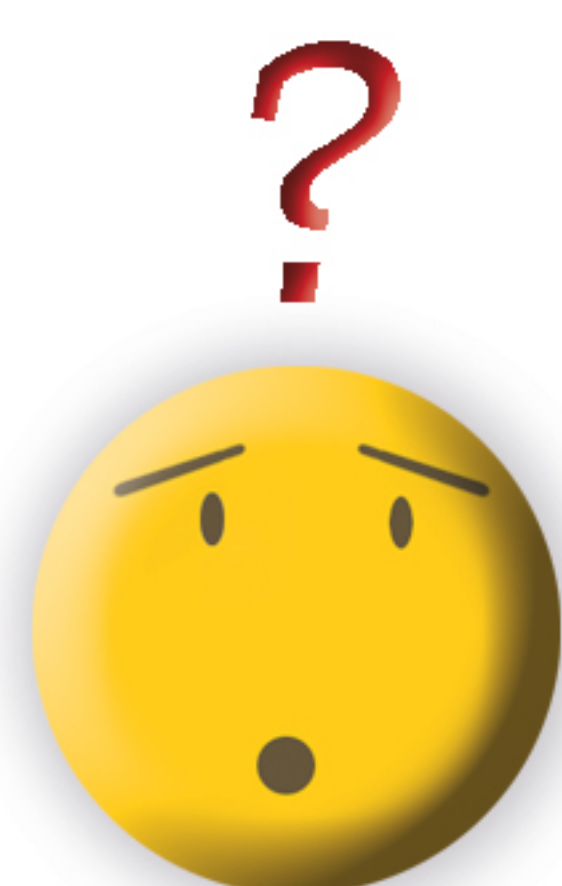

www.oranier.com



Videoanleitung